


V-TAC[®] Installation Instruction

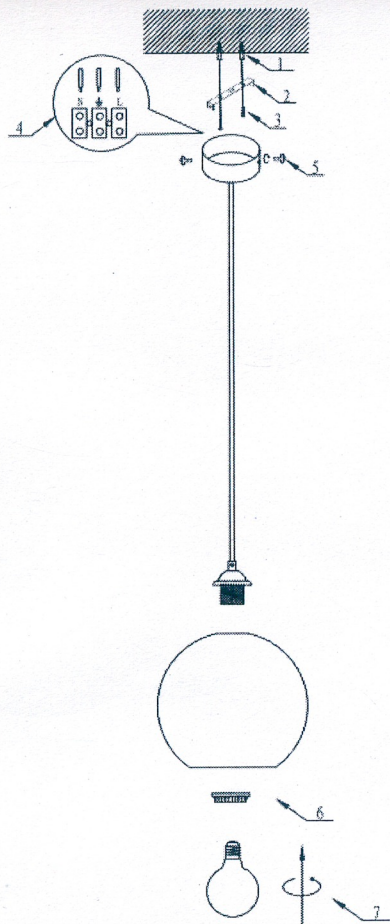

Installation Instruction for VT-7152 VT-7206 VT-7256

Please turn off power and read this instruction before installation.

The installation must be handled by a qualified electrician with license.

Please also turn off power before changing the bulb and cleaning the fixture.

1. Use screws to fix mounting bar to the junction box.
2. Make the wire connections with connectors.
Connect the live wire (L) from fitting to the live wire from main power supply.
Connect the neutral wire (N) from fitting to the neutral wire from main power supply.
Connect the earth wire from fitting to the earth wire from main power supply.
Please pay close attention to avoiding the wires exposing outside when wiring connections.
3. Use screws to fix canopy to mounting bar.
4. Use socket ring to fix shade to the socket.
5. Install the bulb (not included) at recommended wattage to the socket.
6. Check if the installation is completed and turn on the power.



Suitable for a Maximum use of 10-20 hours Daily, Usage of the product for 24Hours a day would void the Warranty